


Interior Rear View Mirror

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. **NOTE:** The location and number of electrical connectors may vary based on vehicle application.

Mirror Types

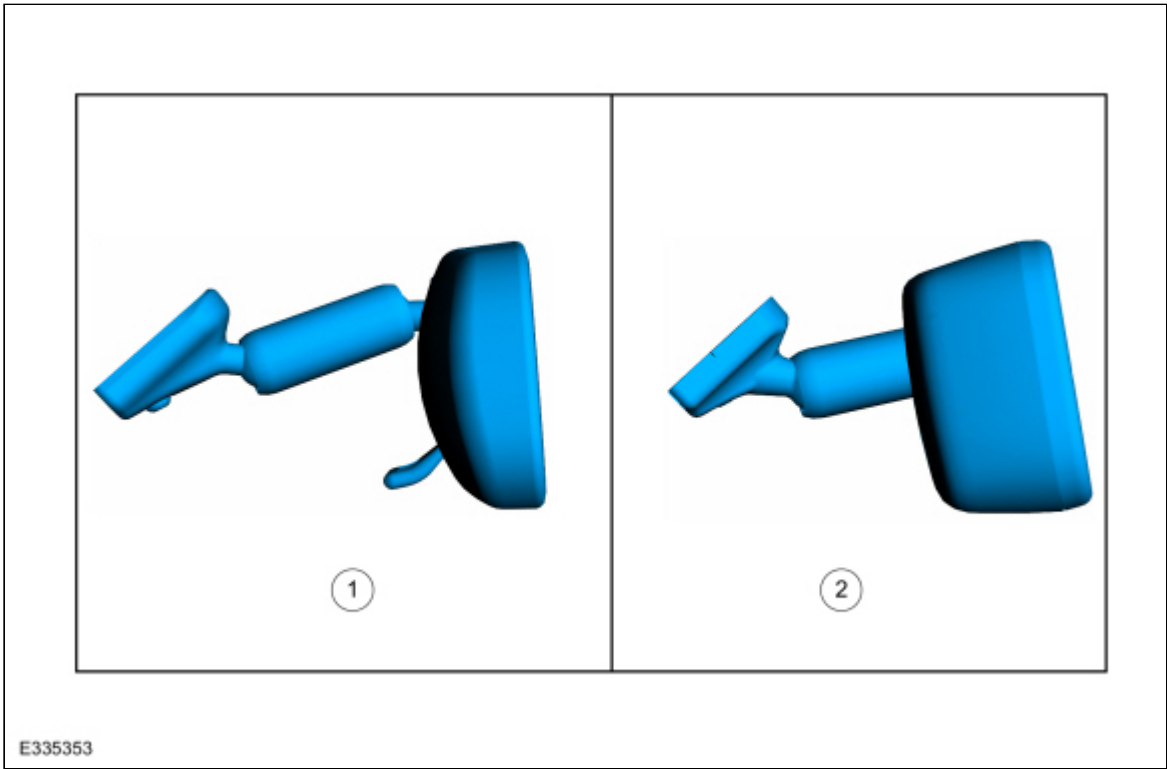


All vehicles

2. If equipped.
Remove the rain sensor cover.

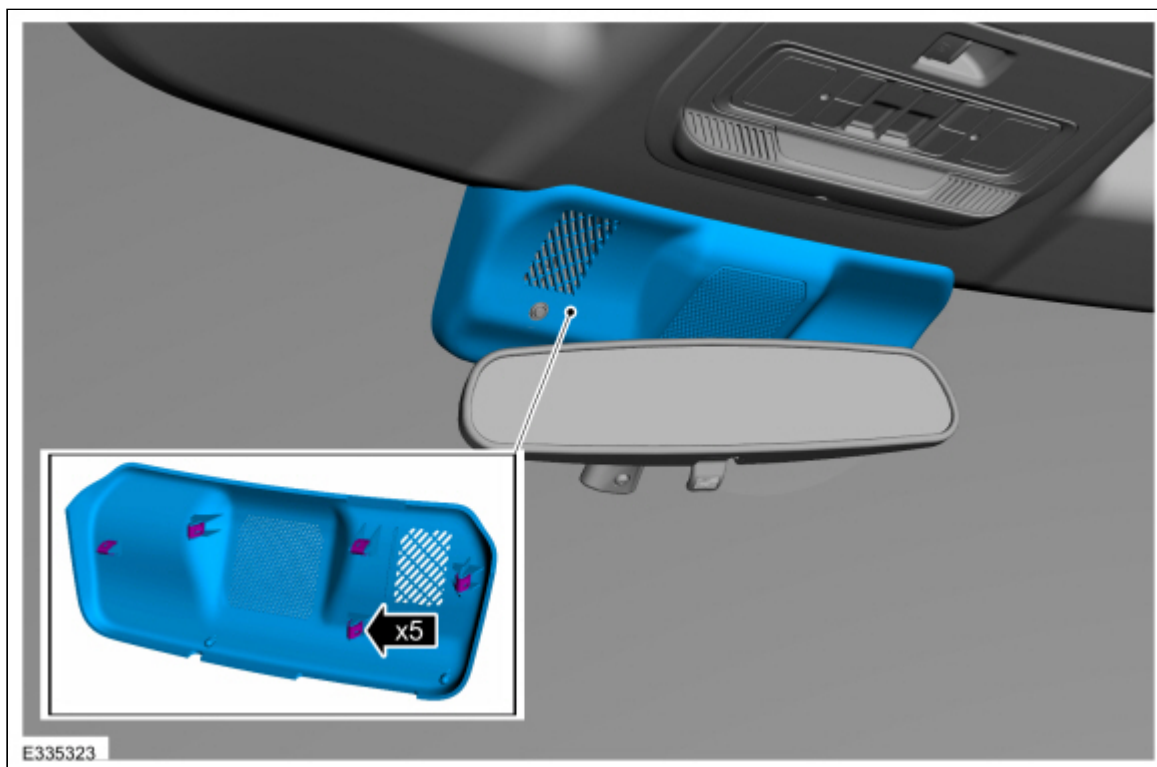


3. Remove the interior mirror.
1. Loosen the set screw.
Torque: 17 lb.in (1.9 Nm)
 2. Slide the interior mirror upward.

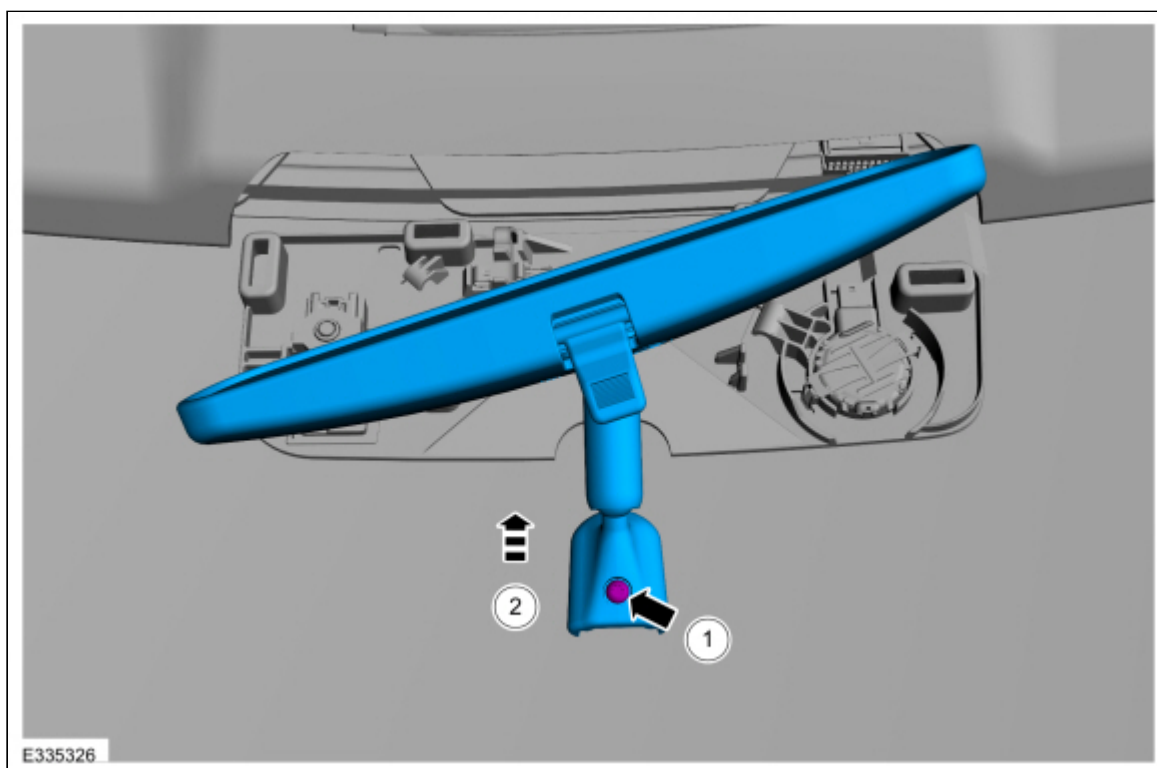


All vehicles

4. If equipped.
Remove the rain sensor cover.





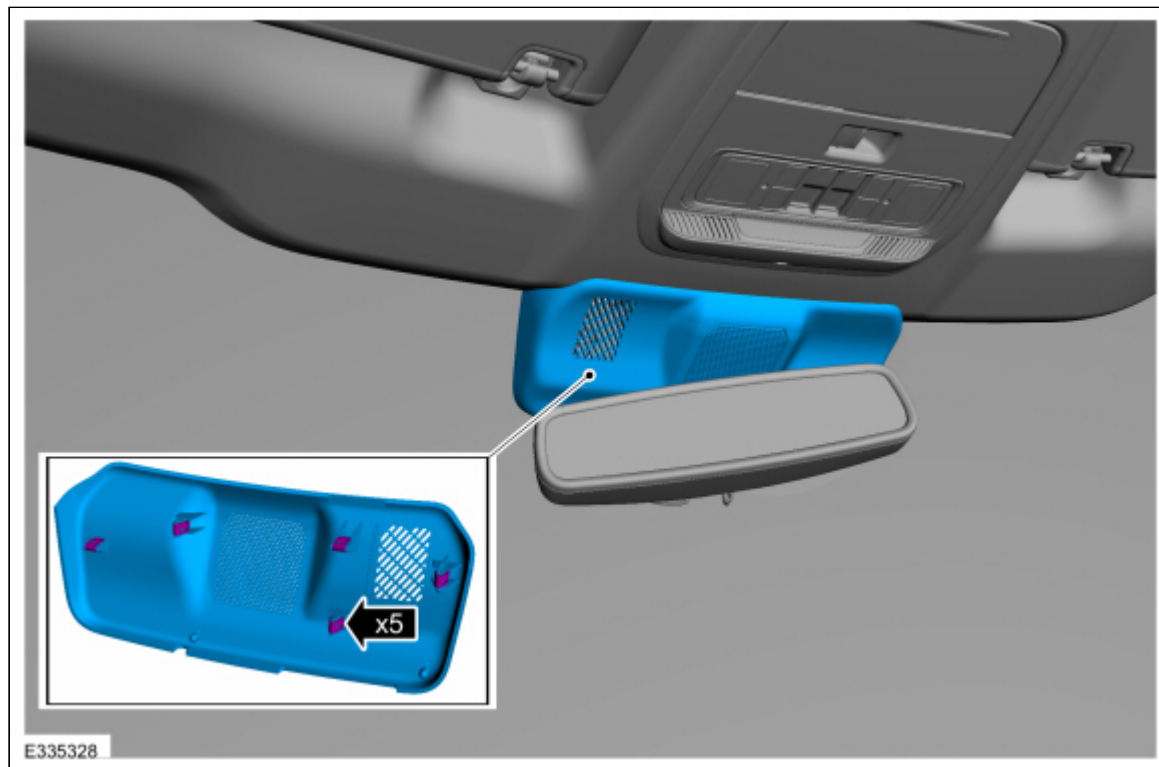


5.
 1. Disconnect the rain sensor electrical connector.
 2. Disconnect the humidity and temperature sensor electrical connector.

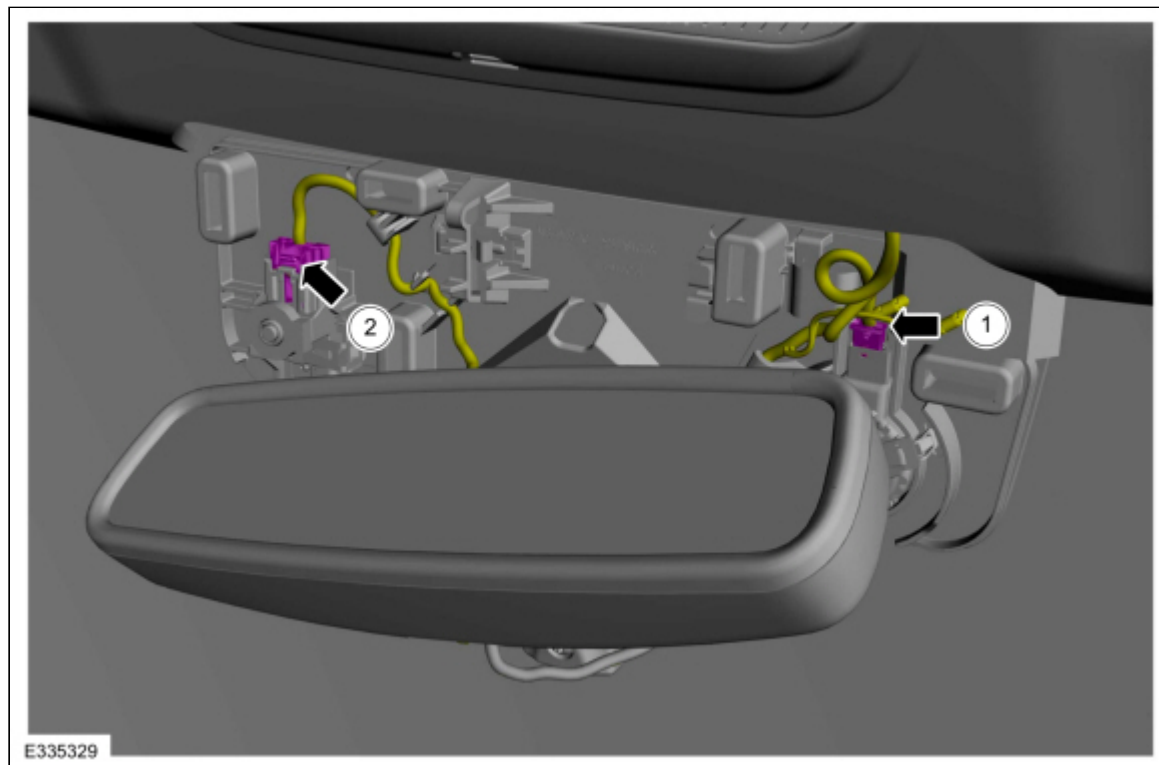


  6. Disconnect the electrical connector and unclip the wiring harness.



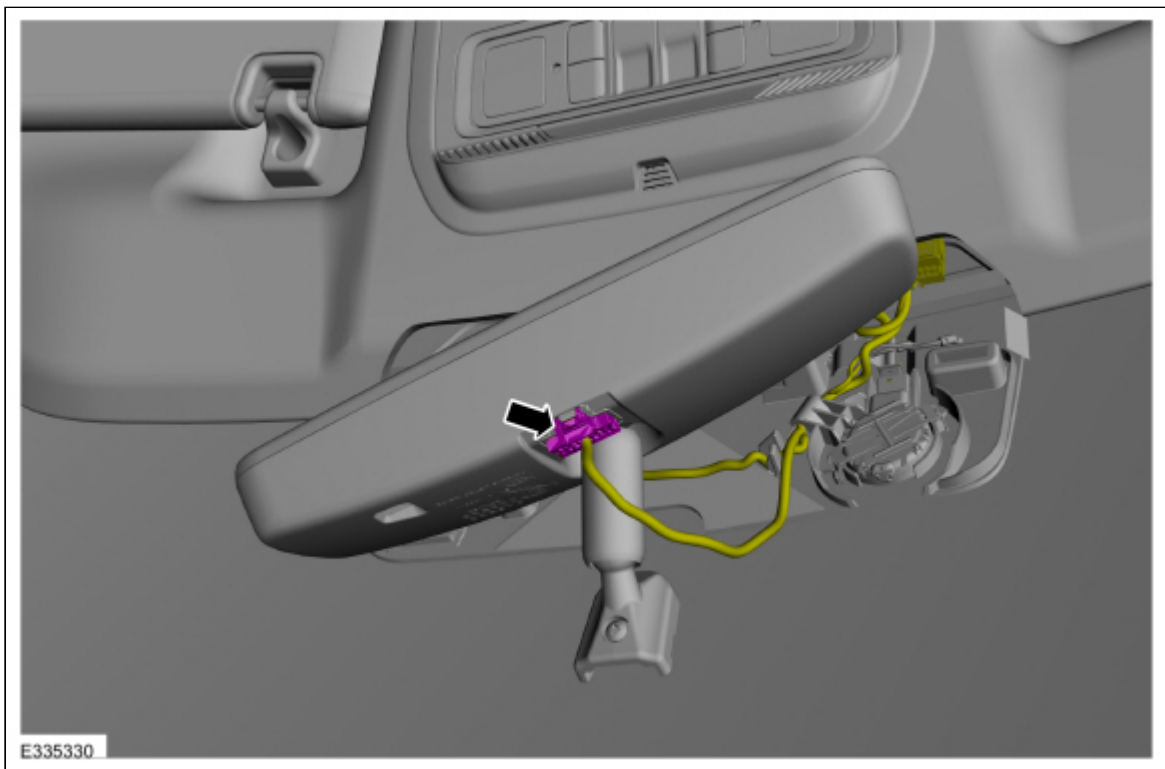

7. Remove the interior mirror.
1. Loosen the set screw.
Torque: 17 lb.in (1.9 Nm)
 2. Slide the interior mirror upward.

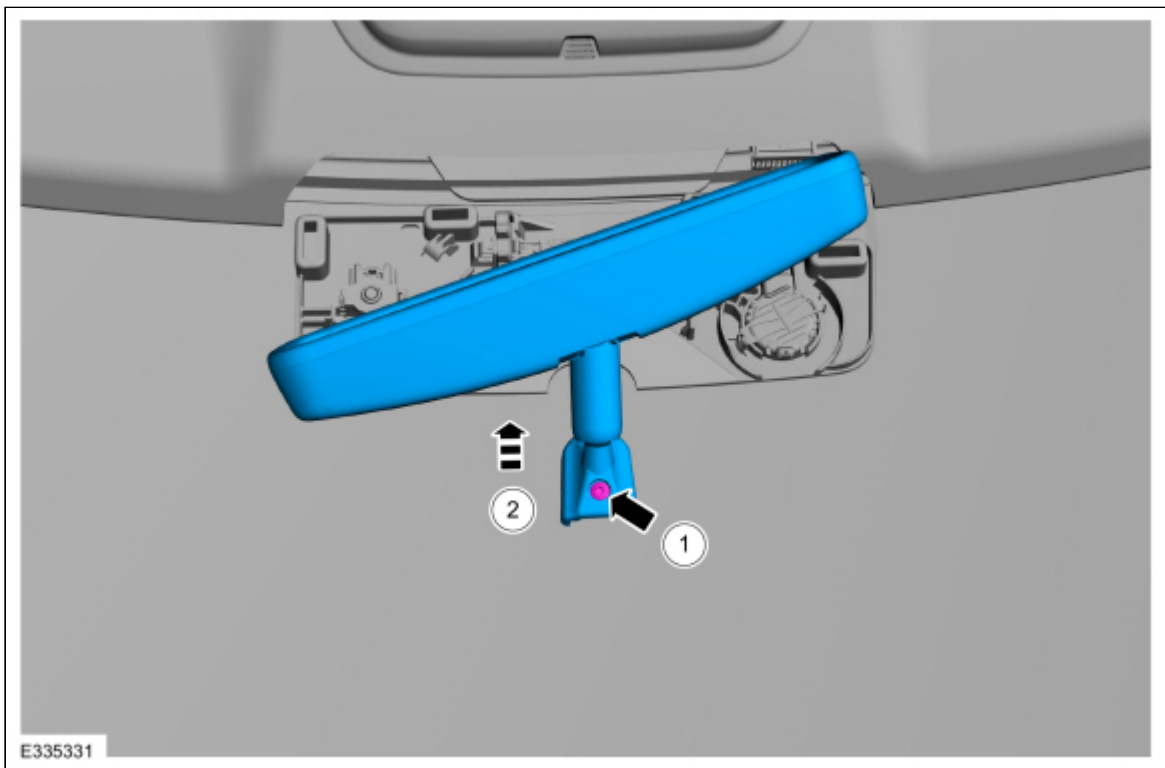

Installation

All vehicles

1. To install, reverse the removal procedure.

All vehicles

2. To install, reverse the removal procedure.